


MONTAGEANLEITUNG
FITTING INSTRUCTIONS
CONSIGNES DE MONTAGE

Abdeckplane ZA-XS, N202 und N602
Hopper cover ZA-XS, N202 and N602
Bâche de Tremie ZA-XS, N202 et N602

Teilleiste / List of parts / Liste des pièces

Pos.-Nr. Pos.-No. Repère	Menge Quantity Quantité	Benennung	Description	Désignation
1	1	Abdeckplane m. Bügel kpl.	Hopper cover cpl. w. U-tube	bâche avec armature cpl.
2	2	Übergangswinkel (nur ZA-XS/N202)	adaptor angle (ZA-XS/N202 only)	coude d'adaptation seulem. ZA-XS/N202
3	10	6kt-Schraube 8 x 20	Hex. bolt 8 x 20	vis 6 pans 8 x 20
4	12	6kt-Mutter M8	Hex. nut M8	ecrou 6 pans M8
5	12	Scheibe 8,4 x 25 x 2	Washer 8,4 x 25 x 2	rondelle 8,4 x 25 x 2
6	2	Puffer	buffer	tampon

ZA-XS / N 202

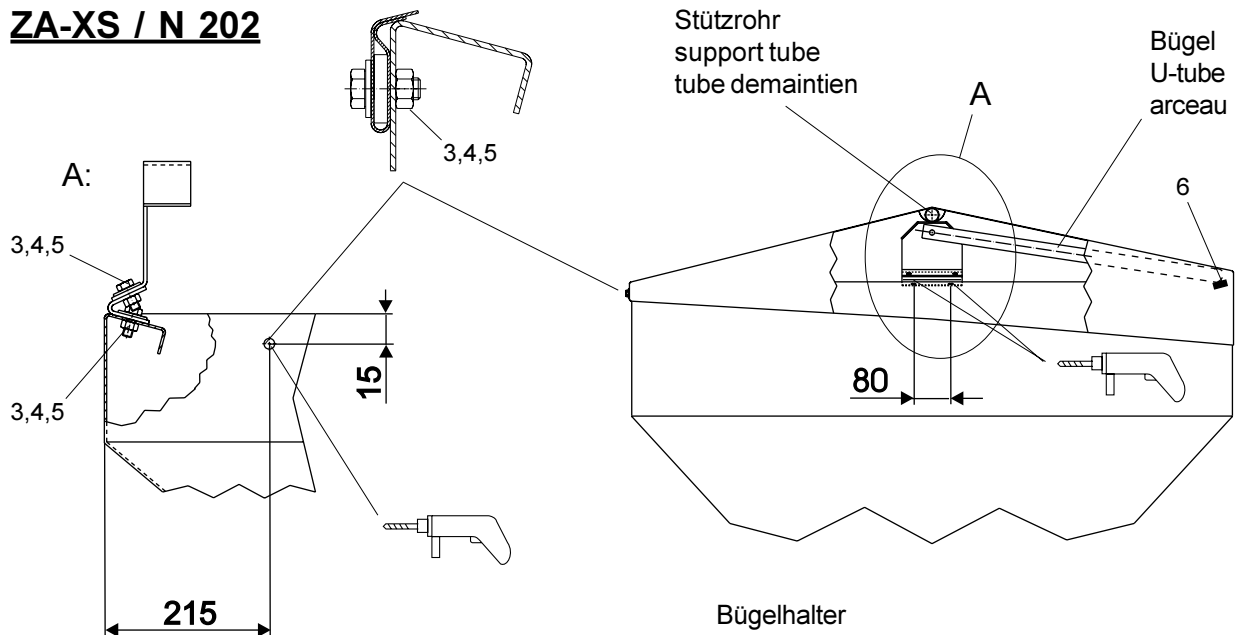

N 602

